


Complete Table of KWM Brass Friction Bushing (German Made)

KWM Brass Bushing Refills..... Pkg. 20 pc. Sizes 72.001 to 72.127, and 72.138 to 72.147 ... 1 to 11 pkg. \$ 8.50 pkg.
12 pkg. or more \$ 8.25 pkg. Sizes 72.128 to 72.137 pkg of 10 pc. 1 to 11 \$ 14.50 pkg. 12 pkg or more \$ 14.25 pkg.

Z Pivot Diameter	B Bore	H	1.0		1.4					1.7	1.9			2.7					3.0	4.0
		D	1.2	1.8	1.8	2.7	3.5	4.7	5.9	5.9	1.8	2.7	3.5	1.8	2.7	3.5	4.7	5.9	8.7	8.7
		R	1.18	1.78	1.78	2.68	3.48	4.66	5.85	5.85	1.78	2.68	3.48	1.78	2.68	3.48	4.66	5.85	8.64	8.64
		R N	I	II	II	III	IV	IVa	V	V	II	III	IV	II	III	IV	IVa	V	VI	VI
0.07-0.08	0.1		L55																	
0.10-0.12	0.15		L56																	
0.15-0.17	0.2		L01																	
0.19-0.21	0.25		L57																	
0.23-0.25	0.3		L02		L64						L86									
0.27-0.30	0.35		L58																	
0.32-0.35	0.4		L03		L08						L87									
0.38-0.40	0.45		L59																	
0.42-0.45	0.5		L04		L09						L32			L94						
0.48-0.50	0.55		L60																	
0.53-0.55	0.6		L05		L10						L33			L95						
0.57-0.60	0.7		L06		L11						L34			L96						
0.65-0.70	0.8		L07		L12						L35			L97						
0.75-0.80	0.9			L61	L13						L36			L98						
0.85-0.90	1.0			L62	L65	L14					L37				L99					
0.95-1.00	1.1			L63	L66	L15						L38			L100					
1.05-1.10	1.2					L16						L38			L101					
1.15-1.20	1.3					L17						L40			L102					
1.25-1.30	1.4					L18						L41			L103					
1.35-1.40	1.5					L19						L42			L104					
1.45-1.50	1.6					L20						L43			L105					
1.55-1.60	1.7					L67						L88			L106					
1.65-1.70	1.8					L21						L44			L107					
1.75-1.80	1.9					L68						L89			L108					
1.85-1.90	2.0						L22						L45			L109				
1.95-2.00	2.1						L69						L90			L110				
2.05-2.10	2.2						L23						L46			L111				
2.15-2.20	2.3						L70						L91			L112				
2.25-2.30	2.4						L24						L47			L113				
2.35-2.40	2.5						L71						L92			L114				
2.45-2.50	2.6						L25						L48			L115				
2.55-2.60	2.7						L72						L93			L116				
2.65-2.70	2.8						L26			L79			L49			L117				
2.75-2.80	2.9							L138	L73	L80							L143			
2.85-2.90	3.0							L139	L27	L50							L144	L118		
2.95-3.05	3.2							L140	L28	L51							L145	L119		
3.10-3.25	3.4							L141	L74	L81							L146	L120		
3.30-3.45	3.6							L142	L29	L52							L147	L121		
3.55-3.65	3.8								L75	L82								L122		
3.75-3.85	4.0								L76	L83								L123		
3.90-4.05	4.2								L30	L53								L124		
4.15-4.25	4.4								L77	L84								L125		
4.35-4.45	4.6								L31	L54								L126		
4.55-4.65	4.8								L78	L85								L127		
4.75-4.85	5.0																		L128	
5.00-5.05	5.2																		L129	
5.15-5.25	5.4																		L130	
5.35-5.45	5.6																		L131	
5.55-5.65	5.8																		L132	
5.75-5.85	6.0																		L133	
5.95-6.05	6.2																			L134
6.15-6.25	6.4																			L135
6.35-6.45	6.6																			L136
6.55-6.65	6.8																			L137

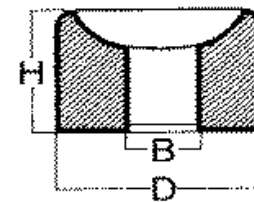

How to use this chart
The numbers prefixed by the letter "L" such as L57 in the chart Indicates the bushing number.
The number serves as a refill number for various assortments.
To select the correct bushing, first Measure the pivot, & find it size in the range of sizes shown in column Z. By reading across, you Will find the various bushing that Will fit the size pivot.
Select the thickness of bushing by Referring to letter "H" & the correct diameter by the letter "D".
After choosing the bushing, read Up the column to line "RN" which indicates the size reamer to Be used for the selected bushing.
Reamers are identified by Roman numerals.

Prices Subject To Change Without Notice.